


COVER SAVER INSTRUCTIONS

Prevent the possibility of damages caused by cover lifters to your spa cover seam.

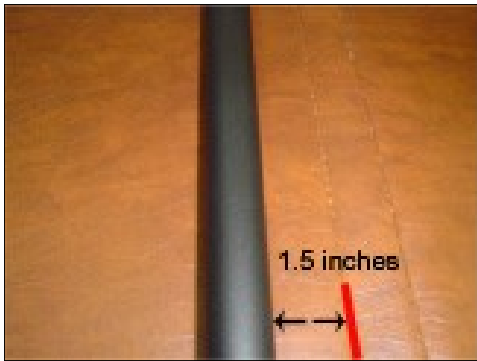

Step 1: Center the cover on the hot tub so it is even on all four sides. The center support bar has to be 1.5 inches from the center of the cover.


Note: When using Cover Saver with new or existing lifters, make sure the center is 1.5 inches away from the center. On existing lifters, you may have to adjust the side pivot arms by removing the screws to allow the cover support arms to move. (See Step 1)



Step 2: Place one piece of Velcro 1 1/2 inch from the inside edge of the cover handles on each side.

Note: There are two supports to be installed. To permanently apply Velcro, use silicon or Crazy Glue (not supplied).

Note: For Cover with pockets, please omit this step.

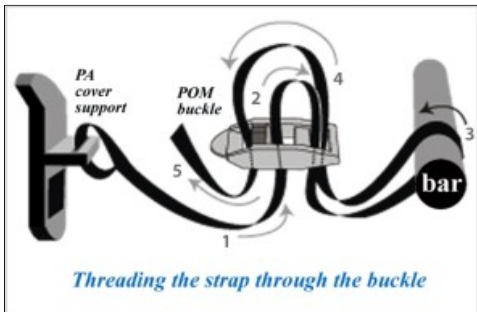

Step 3: Thread the strap through the buckle as shown. Repeat for the other strap.

Part List:

- 4 - 1 1/2" pieces adhesive Velcro
- 2 - PA cover supports, including 145mm PP straps
- 2 - 1 1/2" POM buckles

LET'S CHECK:



When Cover Lifter is in the upright position, the cover should not be resting on the center bar.

After installation, trim excess straps from buckles, melt ends so they do not fray.

All the weight of the cover should be resting on your Cover saver if your Cover Saver has been properly installed.

